

Installation & Set-up Guide

INDUSTRIAL ILS9.75, ILS9.150D, ILS12.75, ILS12.150D
S E R I E S

Table of Contents

Proper Operating Environment

Environment.....	5
Electrical Power Source.....	6
Exhaust System.....	6
Diagram.....	7

Software Installation and Requirements

Computer and Operating System Requirements.....	9
Universal Control Panel (UCP) Installation CD-ROM.....	11

Assembling Your ILS System

System Unpacking - ILS9.75, ILS9.150D, ILS12.75 and ILS12.150D.....	13
Laser Cartridge Installation.....	15
Laser System Leveling.....	18
Finalizing the Connections.....	24
Checking Beam Alignment.....	27

Running Your First Job

Step 1 - Loading and Positioning the Material.....	29
Step 2 - Creating the Graphic.....	29
Step 3 - Printing to Your VersaLASER® System.....	30
Step 4 - Starting the Process.....	31
Step 5 - Material Removal and Reloading.....	31

Thank you for choosing Universal Laser Systems®. We appreciate innovative customers like you who have made Universal Laser Systems an integral part of their business.

Universal Laser Systems is committed to providing the highest level of customer satisfaction and support. To ensure your satisfaction, we urge you to read the documentation contained within the Reference Guide and User Guide CD.

Since 1988, Universal Laser Systems has been committed to continually improving our technology and customer-driven laser solutions. Your satisfaction is very important to us and we welcome your feedback. Tell us about your experience with Universal Laser Systems and our systems at moreinfo@ulsinc.com

Should you have any questions during your installation, please contact your local representative or Universal Laser Systems' Customer Service Team at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com.

Again, thank you for choosing Universal Laser Systems.

Your Universal Laser Systems Team

The Installation & Set-up Guide is designed to provide you with step-by-step instructions for proper installation and set-up of your Universal laser system. Before getting started, you should become familiar with each section of the Installation & Set-Up Guide: Proper Operating Environment Procedures, Software Installation and Requirements, Assembling Your System and Running Your First Job.

Proper Operating Environment

This section will give you step-by-step instructions for site preparation and computer and software setup. Follow the instructions in the order shown.

1. Establishing a Proper Operating Environment
2. Software Installation and Operating System Requirements
3. Assembling Your Industrial Laser Series System
4. Running Your First Job

CAUTION: *Damage to the ILS system due to inadequate or improper operating environment is not covered under the Universal Laser Systems (ULS) Warranty. See the ULS Warranty for additional information. The ULS Warranty can be found in your Reference Guide booklet. Should you require a copy of the Warranty, please contact your local Customer Service at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com.*



Please refer to the Safety Manual before operating your laser system.

Environment (User Supplied)

1. The laser system must be installed in an office, laboratory, workshop or light duty manufacturing environment. Dusty or dirty environments can damage the laser system. Keep the laser system isolated from any processes that produce airborne particles such as sandblasting, sanding, machining, etc. Also, keep the ILS system isolated from any equipment requiring mists of oil or water for lubrication. Airborne dust and liquids can coat and damage optics and motion system components.
2. Avoid small, enclosed, non-ventilated areas. Some materials, after laser engraving or cutting, continue emitting fumes for several minutes after processing. Having these materials present in a confined, unventilated room can create a health hazard.
3. For best results, since the lasers are air-cooled, we recommend operating the laser system between the ambient temperatures of 73°F (22°C) and 77°F (25°C).
4. Avoid storing the laser system outside the temperatures of 50°F (10°C) and 95°F (35°C) as excessively cold or hot temperatures can damage the laser cartridge or reduce its lifetime.
5. Ambient humidity levels must be non-condensing to protect optics.
6. The laser system should be at least 3 feet (1 meter) away from any wall or obstruction.

Electrical Power Source (User Supplied)


1. For your system's electrical requirements, please refer to the "INPUT POWER" label near the power inlet.
2. **CAUTION: Never remove the ground lead to the electrical cord and plug the ILS system into a non-grounded outlet.** A laser system that is not properly grounded is hazardous and has the potential to cause severe or fatal electrical shock. Without proper grounding, the laser system may exhibit sporadic or unpredictable behavior. Always plug the system into a properly grounded (earthed) outlet.
3. Noisy or unstable electricity and voltage spikes may cause interference and possible damage to the electronics of the laser system. If electrical power fluctuations, brown outs or constant power outages are a problem in your area, please contact your local Electrician to supply a power isolation and regulation module. Electrically noisy equipment, such as equipment with large motors, can also cause interference if plugged into the same outlet. It may be necessary to attach the laser system to a dedicated electrical line to resolve the problem.
4. The laser system is designed as a Class I, Group A, pluggable device. It is also designed for connection to IT power systems which provide the most flexibility to the user.

Exhaust System (User Supplied)

1. We recommend you consult with a licensed contractor to meet local safety and building code requirements.
2. The exhaust system must be capable of supplying a minimum of:
 - ILS9.75, ILS9.150D, ILS12.75 and ILS12.150D - **700 CFM (cubic feet per minute)** of airflow while under a load of 6 inches of static pressure (1190m³/hr at 1.5kPa)
3. Do not install forward incline, backward incline, in-line or ventilator fans because these types of air handlers are inadequate and inappropriate for this type of installation. A high-pressure blower must be used to meet minimum airflow requirements.
4. For personal safety and noise control, we recommend that the exhaust blower be mounted outside the building.
5. Rigid tubing should be used for the majority of the connection between the blower and the laser system. The tubing should be smooth-walled and have as few 90-degree bends as possible.
6. Install an exhaust gate to adjust airflow and to close off the exhaust when the laser is not in use. Place this gate near the laser system within 5 to 10 feet (1.50 to 3.00 meters).
7. Use a short piece of industrial grade, wire-reinforced rubber tubing to connect the laser system's exhaust port to the exhaust gate and secure with a hose clamp. This will provide some mobility for your laser system and will isolate exhaust blower vibrations from your laser system.
8. Wire the exhaust blower electrically to a wall switch in the same room for easy ON/OFF control.

Note: The following diagram shows a typical exhaust system layout. Use this as a guideline for proper exhaust system installation. Although this diagram serves as an example, we recommend you consult with a licensed contractor to meet local safety, environmental and building code requirements and to also calculate the correct size blower required for your particular installation. Length of exhaust pipe, exhaust pipe diameter, number of 90-degree angles and other restrictions must be calculated when determining the correct exhaust blower unit. Installing an undersized or oversized blower is not only unsafe, but can also lead to excessive wear and tear to the laser system and premature failure.

ILS9.75, ILS9.150D, ILS12.75 and ILS12.150D

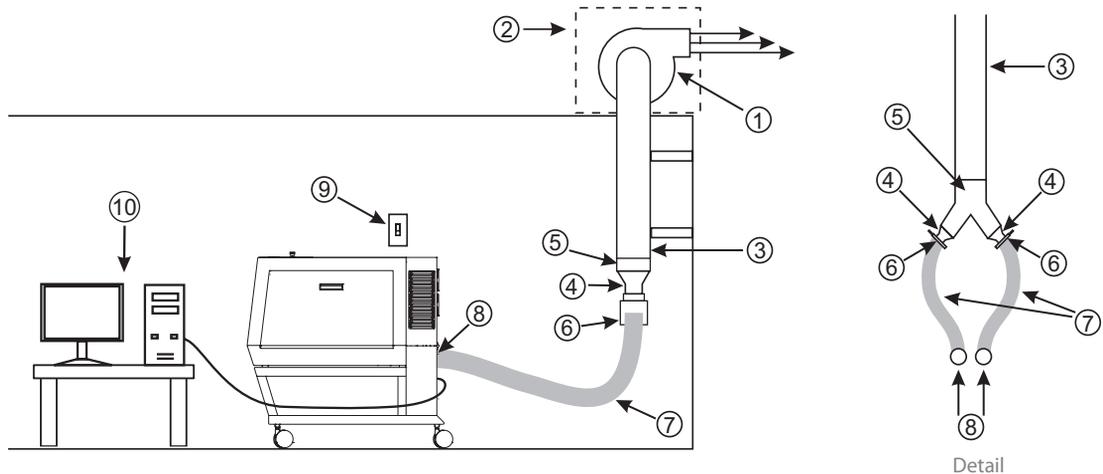

1. Exhaust blower mounted outside* (User Supplied)
2. Weatherproof shield (User Supplied)
3. Rigid ducting matching the diameter of the blower inlet (User Supplied)
4. Adapter to the hose reduces from 4" to 3" (User Supplied)
5. Y-pipe (User Supplied)
6. Shut-off or air-flow gate(s) (User Supplied)
7. Flexible, wire-reinforced, industrial grade rubber hose (User Supplied)
8. Connection to laser system
9. Exhaust On/Off switch (User Supplied)
10. Computer (User Supplied)

*Exhaust blower illustration may differ according to your region.

Software Installation and Requirements

Your computer is a critical component in the operation of the ILS system. In fact, you cannot operate the ILS system if your computer is not connected, powered on, running Windows and running the Universal Control Panel (UCP) software.

You can only run one ILS system per computer at a time. You will need to have a separate computer for each ILS system you own. The ILS system is not designed to be a network printer. You must operate the ILS system using the computer that is directly attached to it via the provided 6-foot USB cable (2 meters). USB cables longer than 6 feet (2 meters) may cause the ILS system to malfunction.

Computer and Operating System Requirements

Minimum Computer Requirements (User Supplied)

- 2.0 GHz processor (minimum)
- Windows XP or Windows Vista*
- 1 GB of RAM (minimum); 2 GB of RAM (minimum) for Vista operating systems
- 40 GB hard drive (15 GB free space) (minimum)
- VGA monitor (minimum 1024 x 768 resolution)
- CD-ROM drive/burner
- Mouse and keyboard
- Available USB 2.0 Hi-Speed compliant port only
- Computer speakers (optional)
- 600 DPI scanner (optional)
- Internet connection and e-mail address (optional)

*The ILS system is only compatible with a 32-bit Windows Operating System. See www.microsoft.com for the minimum computer requirements to run Windows Vista. The ILS system is not designed to run on the Macintosh Operating System.

Note: Some computer manufacturers' USB ports do not comply with USB 2.0 Hi-Speed standards. This may cause the ILS system to exhibit erratic behavior. Confirm that your computer complies with USB 2.0 Hi-Speed by checking your computer manual. For more information on USB 2.0 Hi-Speed compatibility, please visit www.usb.org.

Other USB peripheral devices that demand a large amount of computer processing power may slow down the operation and productivity of the ILS system. If you experience problems with operation, we recommend you disconnect other USB peripheral devices while the laser system is off. **Do not** connect or disconnect devices while the laser system is running a job.

Optimizing Windows

XP Performance

Windows XP, by default, displays many “visual effects” that slow down the computer. We recommend that you turn off these effects by right-clicking on the “My Computer” icon on your desktop, then click “Properties” and then click the “Advanced” tab. In the Performance section, click “Settings,” then click “Adjust For Best Performance” and then click “Apply.”


Vista Performance

Windows Vista, by default, displays many “visual effects” that slow down the computer. We recommend that you turn off these effects by clicking the “Start” button, right-clicking on “Computer,” then click “System Properties” and then click on “Advanced System Settings” link. In the Performance section, click “Settings,” then click “Adjust For Best Performance” and then click “Apply.”

Computer Power Management


Power management is a configuration setting in Windows XP and Windows Vista that reduces the energy consumption of computers and monitors by shutting them down after a period of inactivity. However, since your computer is a critical component in the operation of the VLS system, you do not want your computer to go into the Standby or Hibernate modes while your laser system is operating. Contact your IT Department if you need help in configuring your computer.

XP

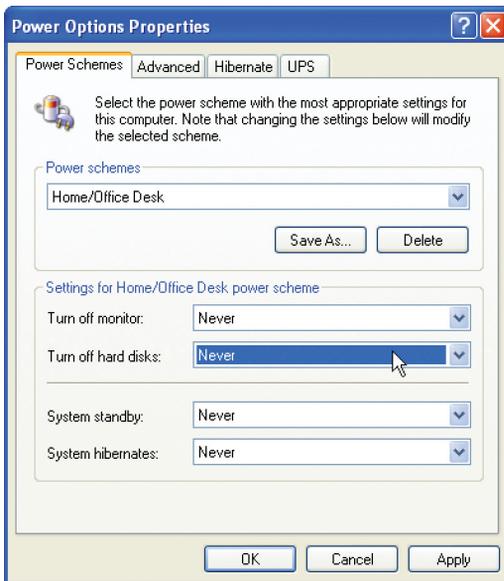

For the Power Scheme in use, select “Never” for **all** the setting options: Turn off monitor, turn off hard disks, system standby and system hibernates.

Vista

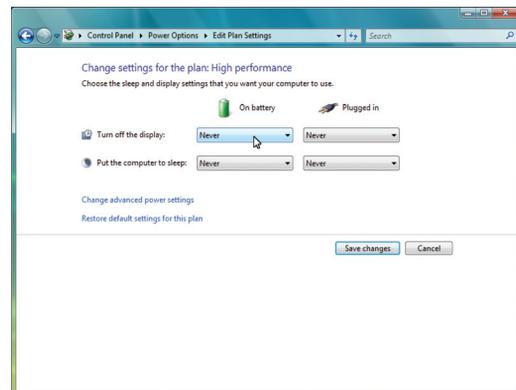

For the Power Scheme in use, select “Never” for **all** the setting options: Turn off display and Put the computer to sleep.

Universal Control Panel (UCP) Installation CD-ROM

At this point you need to install the Windows XP/Vista Universal Control Panel (UCP) and printer driver. In order to install the software, you need to have administrative privileges on the computer before starting installation. The Software Installation CD-ROM can be found on the inside of this manual reference guide.

1. Insert the Software Installation CD-ROM into your PC's CD drive. It should automatically launch the "Universal Control Panel Installation" window. Select the laser series you are installing on the computer.

Note: If the setup window does not automatically launch, you can launch it manually. Locate your CD or DVD drive using Windows Explorer and click on the [Setup.exe](#) application to launch the setup window.




2. Select the components you would like to install on your computer, then select the "Next" button.


Note: If you choose to only install the "Universal Control Panel," you will need to proceed to step 4.



3. If you have selected to install the Printer Driver, you will then be prompted to select the laser system you would like to install on the computer. Once selected, click the "Next" button.

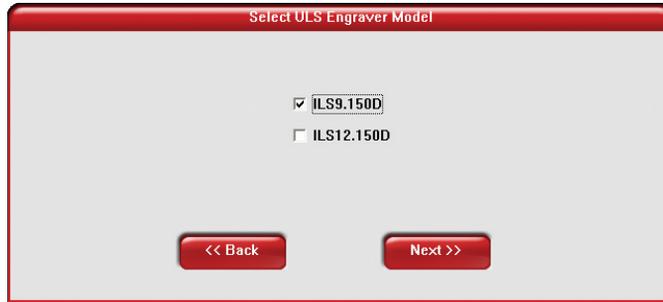

4. The installation process will proceed as indicated by a progress bar. Be patient. Loading the files can take a few minutes depending on your computer's processor speed.

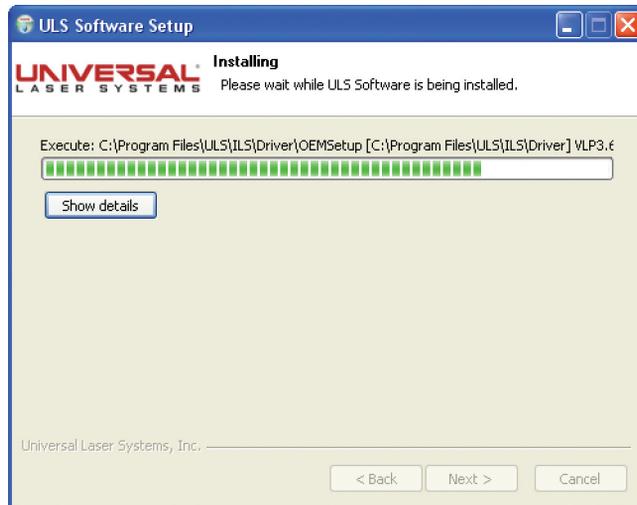

5. When the installation process is finished, the "Completing the ULS Software Setup Wizard" window will appear. Read the instructions and make your desired selection. If you Reboot Now, save all your work prior to rebooting. If you decide to reboot later remember that you must reboot before connecting the ILS system to your computer. Click on the "Finish" button to complete installation. The window will automatically close. Remove the Software Installation CD-ROM. All the files required to operate your machine have been loaded onto your computer.

Assembling Your ILS System




Familiarize yourself with the instructions before getting started.

Once the system has been placed in its desired location of operation, it is necessary to properly level the laser system. Once leveled, install the laser cartridge on the back of the machine and perform a beam alignment check. **Do not** power up your laser system until the final step, "Checking Beam Alignment."

CAUTION: *Do not attempt to move or lift this system alone. Obtain assistance from three or four additional people when lifting or carrying (secure motion system and doors before lifting). Bodily injury may occur if improper lifting techniques are used or the system is dropped.*

System Unpacking - ILS9.75, ILS9.150D, ILS12.75 and ILS12.150D

Before unpacking the laser system and for servicing reasons, make sure that the system is located in a place where it can reside at least 3 feet (1 meter) from any wall and 3 feet (1 meter) from any obstruction to the left and right sides of the laser system.

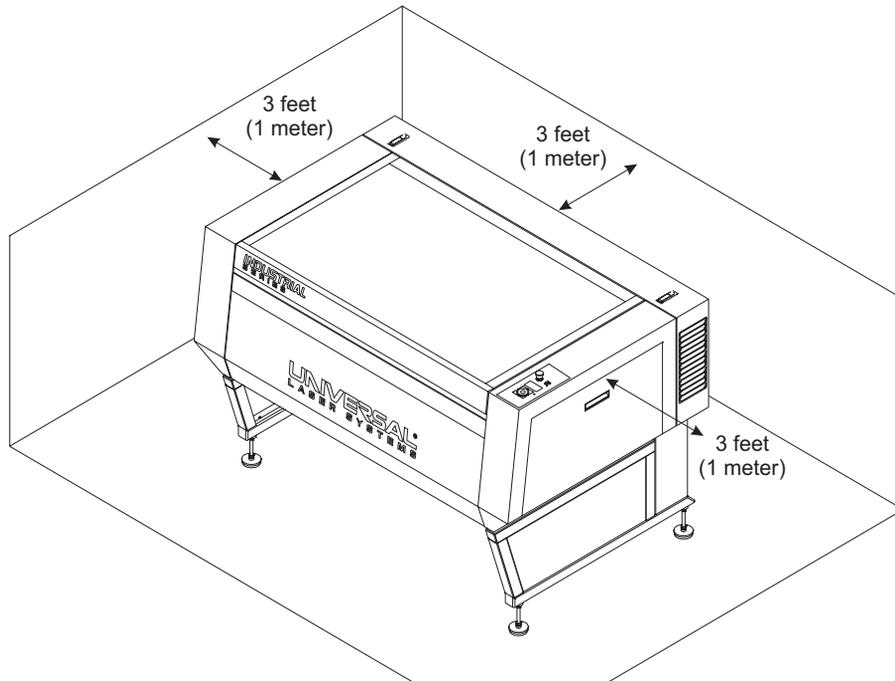


Your laser system will have arrived in a wooden crate. After the top and sides have been removed from the crate, the laser system must be detached from its shipping pallet and lifted onto the floor as follows:

Note: If you need to move the laser machine through a doorway smaller than the laser system, please contact your local Customer Service at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com for further instructions.

1. Loosen the four bolts indicated in the drawing to release the laser system from its pallet.
2. Lift the laser system with wood supports attached and place it on the floor where you intend to operate it.
3. Remove the strap (1) wrapped around the laser system once it has been removed from the crate.
 - a. If you have a forklift, you can lift the laser system off of the pallet by inserting the forks (spread as wide apart as possible) under the wooden supports attached to the cart legs. Then lifting the laser system a few inches, pull the pallet from underneath and lower the laser system to its proper operating position.
 - b. If you do not have a forklift, four people must lift the laser system up, walk it carefully off of the pallet and lower it to the floor.
4. Remove the wooden supports clamped to the legs of the cart by unscrewing the 4 bolts that sit between the cart legs.
5. Attach your exhaust system's wire-reinforced rubber tubing to the exhaust port at the rear of the laser system and secure with a hose clamp.



Proceed to page 15 "Laser Cartridge Installation."

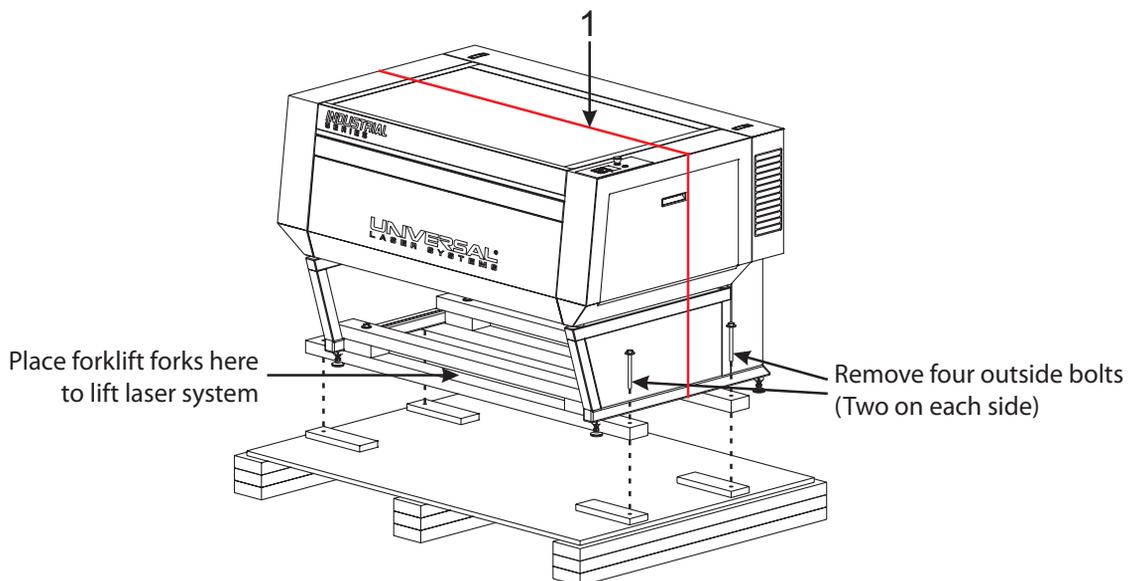

Laser Cartridge Installation


Note: The following images illustrate a ILS12.150D laser system with two laser cartridges. If you own a single laser cartridge system, you will install the single laser cartridge only.

1. Make sure that your power cord to the system is not plugged in at this time. Place your finger on the button part of the latch until the latch is released. Gently fold back the rear cover. Some laser systems are shipped with keyed locks.

Note: Access latches for the laser cover are lockable. However, all systems are shipped from the factory with latches unlocked. If you need to lock the latches, please contact our Customer Service at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com for keys.



2. Visually locate the mounting blocks (1), the laser latch(es) (2) and alignment fork(s) (3). Notice that the alignment fork has two plates, one small and one large. Locate the gap between the two plates.

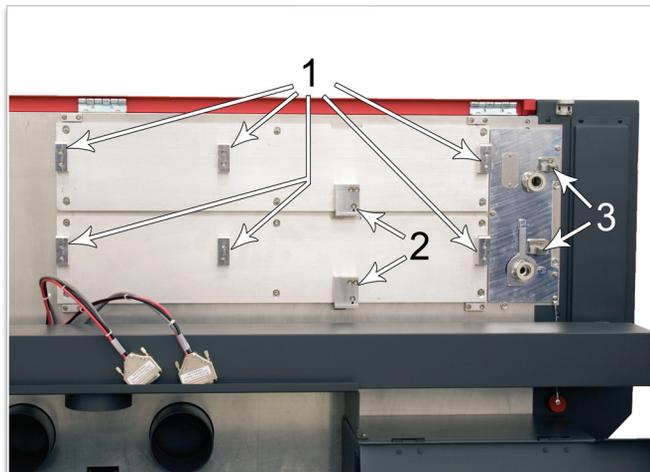

3. Observe the "V" groove along the upper (3) and lower (2) part of the laser cartridge base plate and the alignment plate (1) at the end of the base plate.




4. If you have purchased two laser cartridges, mount the first cartridge onto the lower mounting blocks first. **Single laser users should mount the laser cartridge in the top position.**
5. Pick up the laser cartridge by the ends and tilt it at a 30 degree angle as shown (1). Mount the cartridge onto the mounting blocks shown in step 2 (page 15) by placing the upper "V" groove on top of the mounting blocks. Slide the cartridge to the right until the outer edge (2) of the alignment plate contacts the inside edge of the large plate of the alignment fork.



6. Slowly rotate the laser cartridge, making sure that the alignment plate is centered in the gap in the alignment fork. As you slowly release the weight of the laser, you should feel it lock itself smoothly into place. **Never force the laser into position.** If the laser does not install smoothly, check for obstructions such as pinched wires or hoses or a binding laser latch. Once installed, verify that the alignment plate is centered within the alignment fork.



7. Plug in the power connector (1) to the corresponding laser cartridge. The power connector is labeled Top (2) or Bottom (3). Single laser cartridge users should leave the bottom connector unplugged and out of the way.

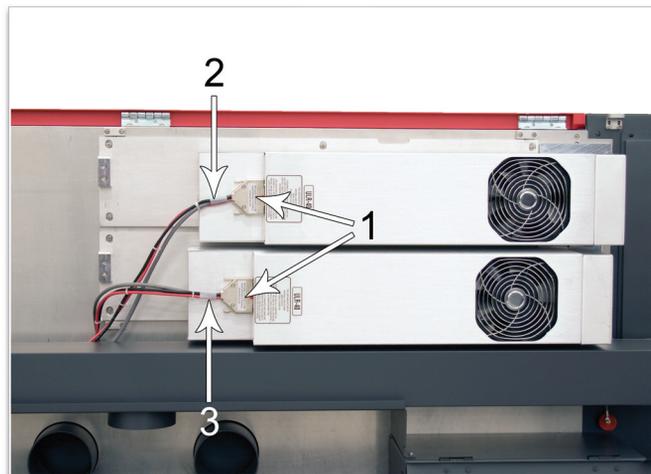

8. Close the rear cover, making sure that wires or hoses do not become pinched when the cover is closed. Gently close the rear cover until the sliding latches lock into place.
9. Once the laser cartridge has been installed, proceed to **“Laser System Leveling” on page 18.**

Laser System Leveling


1. Once the laser system is in its proper operating location, open the top door first (1), then open the front door (2).



2. Locate the small bubble level (1) on the front of the laser system frame.




3. Adjust the caster height using the adjustment screw (2) until the front of the laser system is level from one side to the other. Once the front of the system is level, secure the front casters by tightening the nut (1) up against the cart leg.

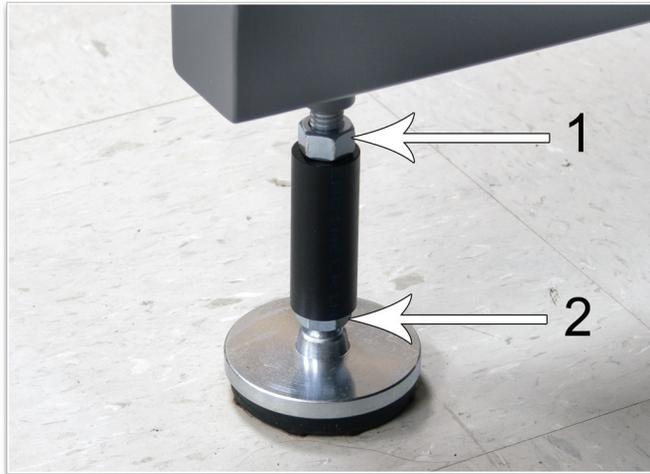

4. Locate the small bubble level on the back frame of the laser system.




5. Adjust the caster height using the adjustment screw (2) until the back of the laser system is level from one side to the other. Once the back of the system is level, secure the back casters by tightening the nut (1) up against the cart leg.

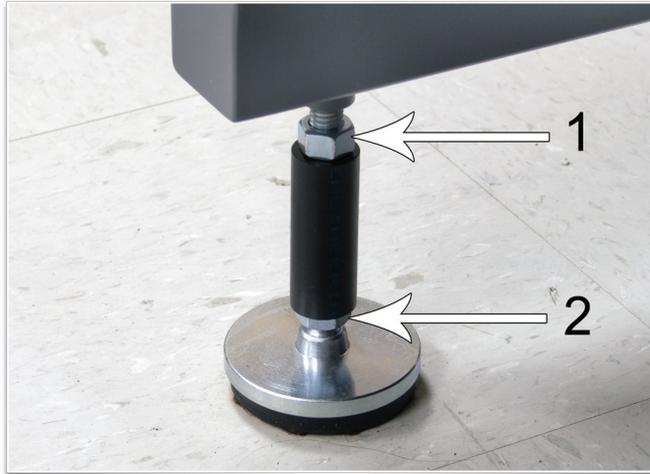

6. Located within the body of the laser system, underneath the engraving table, is a box. Open the box and set the focus tool aside. You will need the focus tool for later use.





7. Remove all of the foam pieces that hold the X-Axis Arm in place. Three pieces are located on each end of the X-Axis Arm (1) and one holds the Focus Carriage in place (2).

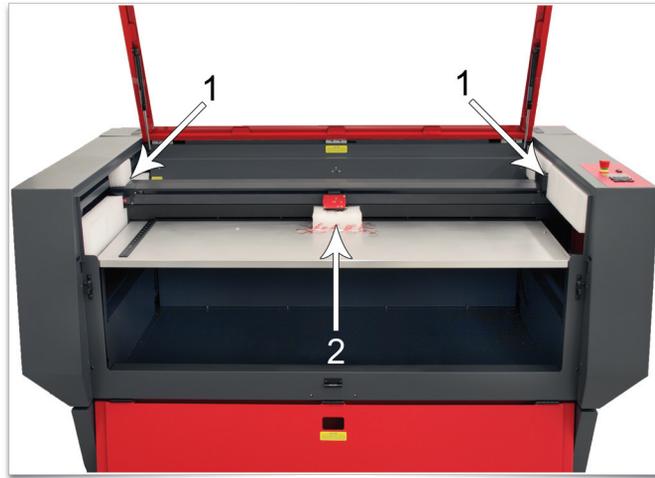

8. Manually move the Focus Carriage by hand to the upper left corner.



- Place the focus tool* against the black lens plate (focus carriage) so that the flat edge of the focus tool rests against the front side of the focus carriage as illustrated. Take note of the fit of the focus tool (it should look like the diagram to the right) in the upper left corner of the system. This corner will be your reference point.

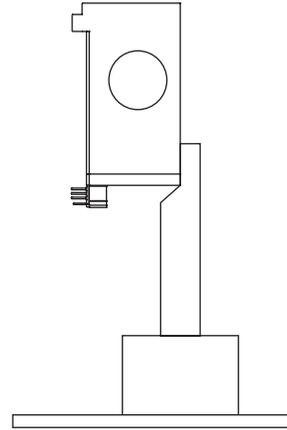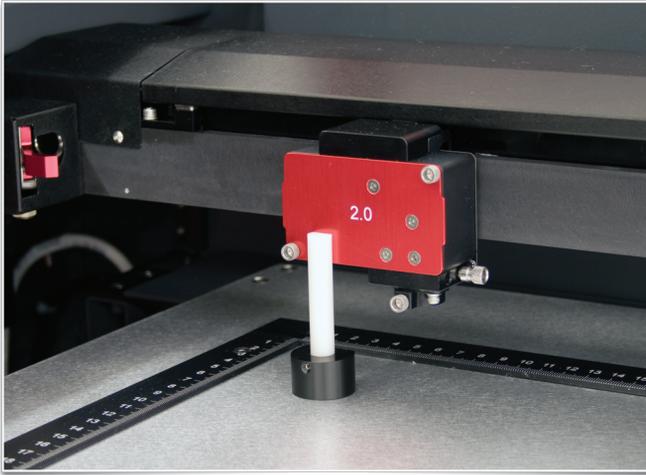


*Alternate leveling method available. See page 23.

- Using the upper left corner as a reference point, move the focus carriage by hand to each corner and take note of any differences between the fit of the focus tool in the upper left corner of the field and the fit of the focus tool in each of the other corners.




11. If one or more of the other corners does not match the upper left corner, adjust the caster directly underneath that corner up or down until the focus tool fit at that corner matches the fit at the upper left corner. First loosen the lock nut (1), then turn the adjusting screw (2) in 1/8 turns. Once the foot is at the correct height, tighten the lock nut (1). When you are done, the focus tool fit at all four corners should be the same.

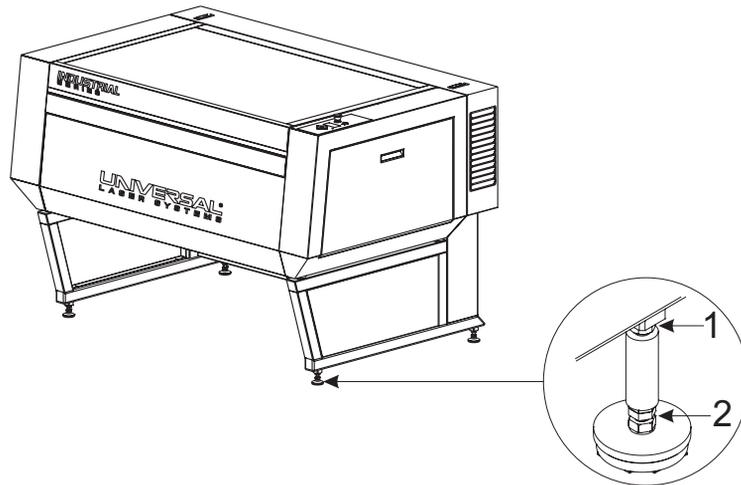

12. Once properly leveled, **proceed to page 24.**

*Alternate leveling method

For the best leveling results, use a digital caliper and adjust the caster directly under each corner that does not match the height of the upper left corner until that corner matches the upper left corner's height. Verify that you zero out the caliper before taking any measurements. The height at each corner should be within 0.010" (0.254 mm) of the height at the upper left corner.

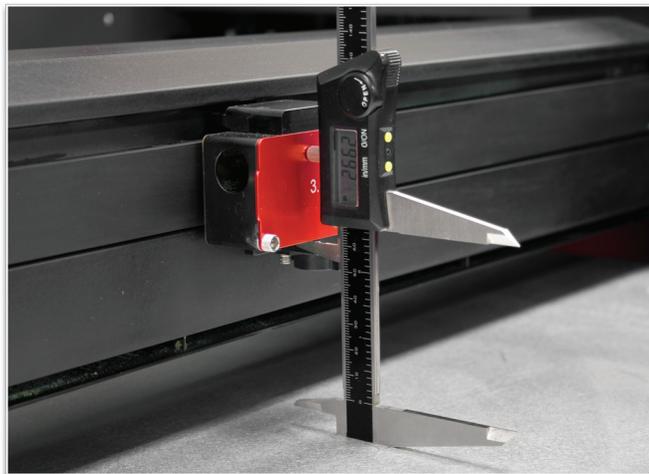

Finalizing the Connections

Make the following connections in the order described, otherwise static electricity can potentially damage the computer and/or the laser systems electronics.

1. Connect the 3-inch (76.5 mm) flexible rubber exhaust system to the rear of the laser system if you have not already done so.
2. Connect the laser system's power cord and your computer's power cord to a grounded electrical outlet.

Note: International users may need to connect an adapter to the power cord to be able to plug it into their power source.

CAUTION: *Make sure that you attach the adapter correctly to the power cord and that your power source is properly grounded (earthed).*

3. Do not power on the laser system at this time.

Note: A properly installed 9-volt battery is necessary to operate the laser system. The laser system will not function without a charged battery installed. Keep a spare 9-volt battery on hand at all times.

4. Install the provided 9-volt Thermal Sensor battery into the ILS laser system. The Thermal Sensor battery cavity is located on the back of the laser system.
 - a. Verify that the 9-volt battery is in the Thermal Sensor holder. Gently push on the Thermal Sensor battery holder as indicated until it latches in place.



5. USB 2.0 Hi-Speed (Only)


The laser system comes equipped with a high quality, 6-foot (1.82 meters) USB 2.0 certified cable. We recommend you use this provided cable.

CAUTION: Do not use any adapters, extension cables, USB cable longer than 6 feet (1.82 meters), or other devices between the computer's USB port and the port on the laser system; sporadic or unpredictable behavior may result.


- a. Connect the USB cable provided between the USB port of the computer and the USB port on the back of the ILS system. Do not use a USB cable longer than 6 feet (1.82 meters).



- b. After connecting the USB cord, the "Found New Hardware Wizard" will open and offer to connect to "Windows Update" to search for software. Select "No, not at this time." Then click "Next" to continue.

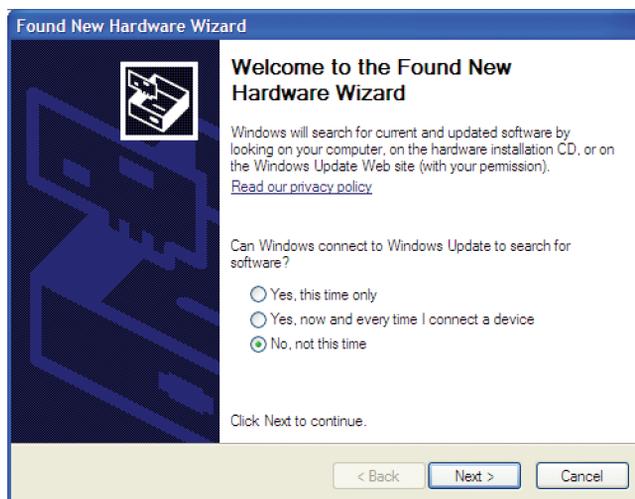

- c. Select “Install the software automatically.” Then Click “Next” to continue. You do not need to insert the Software Installation CD-ROM.

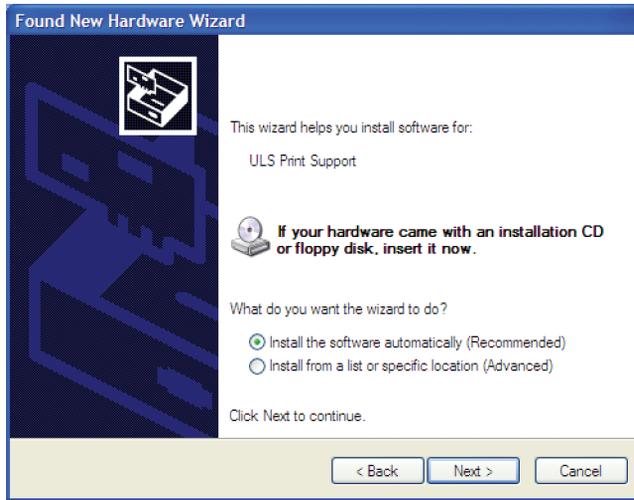

- d. A warning message will appear. Select “Continue Anyway.” Do not be concerned. Installing the ULS Firmware will not harm your computer in any way. The firmware will begin to load.




- e. Click “Finish” to close the Wizard.
- f. Another set of **New Hardware Wizard** windows may appear after the initial USB connection. Follow the same instructions as mentioned previously. Once completed, your new hardware is installed and ready to use.
- g. Once installed, **proceed to page 27.**

Checking Beam Alignment

Note: You will not engrave anything at this time.

1. Open the top door.
2. Place a small piece of masking tape across the 3/4" (19 mm) hole in the focus carriage (1). Gently rub the tape around the edge of the hole so that you can see the outline of the hole through the tape (2).
3. Power on your computer and verify that the Universal Control Panel (UCP) icon is present on the taskbar. If not, activate it by double-clicking on the "Universal Control Panel" icon on your desktop.
4. Power on the laser system by pressing the Power switch  on the ILS system keypad.
5. With the top door open, a red dot will appear on the masking tape (3). The red dot should appear centered, within 1/8 inch (3.18 mm). If not, turn off the laser system, remove and re-install the laser cartridge and try again. If the red dot still does not appear centered, please contact our Customer Service at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com.
6. Laser beam alignment is now complete. Power off the laser system and **remove the masking tape**.

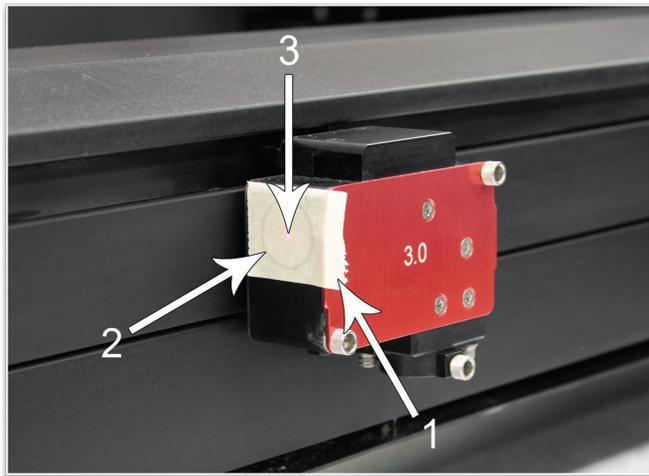

Focus Carriage Beam Alignment


Running Your First Job

We will now illustrate how to use your laser system to engrave on a piece of anodized aluminum from start to finish. In this example, you will raster engrave a Test Card on a 2 x 3.5 inch (50.8 x 89 mm), 0.0195 inch (0.49 mm) thick piece of anodized aluminum.

Note: For this example we will be using CorelDRAW X3 and the CorelDRAW sample file provided on the software CD. Install CorelDRAW, but do not start a new project.

Step 1 – Loading and Positioning the Material

Open the top door and position the piece of anodized aluminum (1) into the upper left corner of the table, against the rulers.

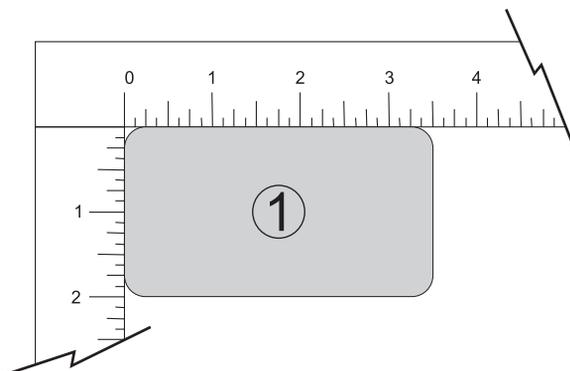

Step 2 – Creating the Graphic

Using CorelDRAW, open the sample graphic file found on the software installation CD that came with the ILS system. The file is named [ULSTest.cdr](#). The Software Installation CD contains test files in .cdr, .eps, and .dxf.

Step 3 – Printing to your ILS System (Materials Database Tab)

You will be using the Materials Database Tab in the printer driver. Other graphic software programs may differ.

1. Verify that the UCP  is running in the taskbar.
2. When you are ready to print the job, click FILE and then click PRINT. Make sure that your laser system appears in the DESTINATION NAME dropdown list, and then click PROPERTIES (Figure 4) to display the ILS system printer driver settings (Figure 5).
3. Choose your material, in this case metal, and then select the correct material type: Aluminum Anodized (Figure 5).
4. Set the Fixture Type to NONE.

Note: If you were using an optional accessory or custom fixture, you would choose it from the fixture list.

5. Measure the thickness of the material (we recommend using calipers) and enter it in the material thickness field. In the example, the provided anodized aluminum is 0.019" (0.483 mm) thick.
6. Click OK when done.
7. Now click on PRINT in the Print dialog window (Figure 4).
8. Click on the ILS system icon on the taskbar and the current print job will appear in the Viewer Tab of the Universal Control Panel (Figure 6).
9. Now click on the System Tab and verify that the Auto Z box is checked.
10. Return to the Viewer Tab and proceed to the next step.

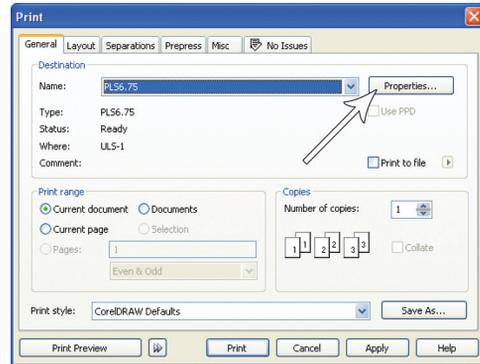


Figure 4

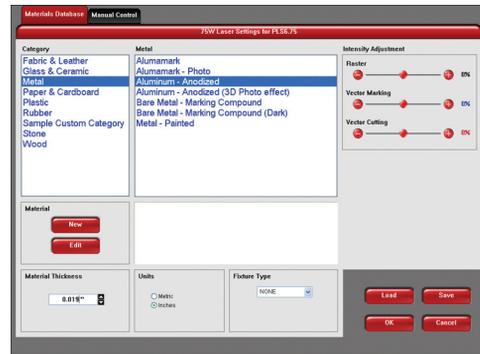


Figure 5

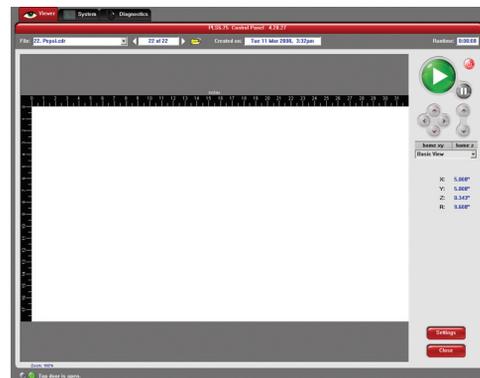


Figure 6

Step 4 – Starting the Process

1. Turn on the exhaust and ILS system.

Note: Laser system cooling fans are variable speed and may speed up and slow down during operation as needed to cool the lasers.

2. Make sure the material is positioned correctly within the engraving area.
3. Close the top door.
4. Click the green START button on the UCP to begin laser processing (Figure 6 on previous page).


CAUTION: Observe that the laser system is functioning as desired. If any abnormalities occur, including, but not limited to, flaming, sparking, melting or excessive smoking of the material you are engraving, STOP THE ENGRAVING PROCESS IMMEDIATELY BY EITHER PRESSING THE PAUSE BUTTON OR OPENING THE TOP DOOR. Re-check the settings in the printer driver as well as the laser system. If everything seems to be correct, check focus manually as described in the User Manual located in the Reference Guide packet and adjust if necessary. If you cannot resolve the issue, please contact your distributor or the ULS Customer Service Team. NEVER LEAVE THE LASER SYSTEM UNATTENDED DURING THE ENGRAVING OR CUTTING PROCESS.

Step 5 – Material Removal and Reloading

Once the laser system has completed processing the material, the laser beam will turn off and the focus carriage will move to the home position in the upper right hand corner.

Before opening the top door, wait a few seconds to allow any remaining fumes that are leftover from the laser engraving or cutting process to evacuate through the exhaust system.

Congratulations! You have just completed your first engraving project with your new ILS system. Below is an image of the sample engraving job. If your results are not satisfactory, please contact the Customer Service Department at 480-609-0297 (USA), +43 1 402 22 50 (Austria), +81 (45) 224-2270 (Japan) or e-mail us at support@ulsinc.com.

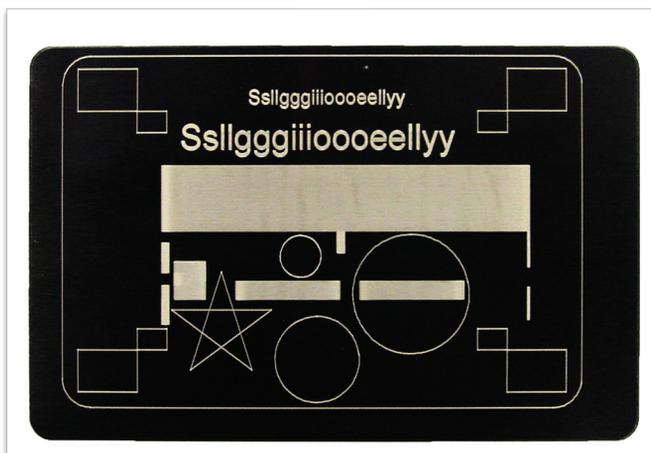

Notes

Notes

©2008 Universal Systems, Inc. All Rights Reserved. The Universal Laser Systems logo and name, and VersaLASER are registered trademarks, and High Power Density Focusing Optics, Quick Change, Rapid Reconfiguration, SuperSpeed are trademarks of Universal Laser Systems, Inc. All other company and product names are trademarks or registered trademarks of their respective companies.

Universal's laser systems are protected under one or more of U.S. Patents: 5,051,558; 5,661,746; 5,754,575; 5,867,517; 5,881,087; 5,894,493; 5,901,167; 5,982,803; 6,181,719; 6,313,433; 6,342,687; 6,423,925; 6,424,670; 6,983,001; 7,060,934. Other U.S. and international patents pending.

The VersaLASER system has been awarded U.S. Design Patent No. D517,474 for the unique design of its external cabinet, which also functions as a Class 1 laser safety enclosure.

